



1) CONTINUATION CONTACT INCLUDED ONLY WHEN OLTG HAS THROUGH POSITIONS.
CLOSED WHEN OLTG IS IN THROUGH POSITIONS.

- E1 Anti-condensation heater
- E3 Cabinet light
- K1 Contactor, step-by-step operation
- K2 Contactor, raise
- K3 Contactor, lower
- K6 Time relay, running-through protection
- M1 Motor
- Q1 Motor protective switch
- S1 Control selector switch
- S2 Control switch
- S5 Interlocking switch, open when hand crank is fitted
- S6 Cam switch (Limit switch)
- S8 Push button, EMERGENCY STOP
- S9 Switch, door operated
- S11 Contact block
 - 1-2 Starting contact
- S12 Cam switch
 - 1-2, 3-4 Maintaining contact
 - 5-6, 7-8 Interlocking contact
 - 9-10, 11-12 Auxiliary contact
 - 13-14, 15-16 Auxiliary contact
- S14 Position transmitter (Potentiometer)
- S15 Continuation contact
- X Terminal board group

- | | | | |
|--|------------------|--|------------------|
| | Raise operation | | Remote control |
| | Lower operation | | Local control |
| | Upper limit pos. | | Protective earth |
| | Lower limit pos. | | Crank |

